



Included Accessories:

- 2 copper plated keys
- 56-1 bar strike
- 4 lock mounting screws

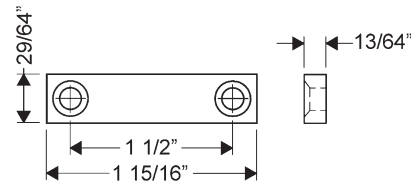


56-1 bar strike

Installation/handing for key-retaining option

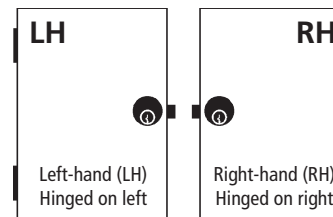


Optional spacers

Note: use of spacers and strikes depends on application and material thickness.

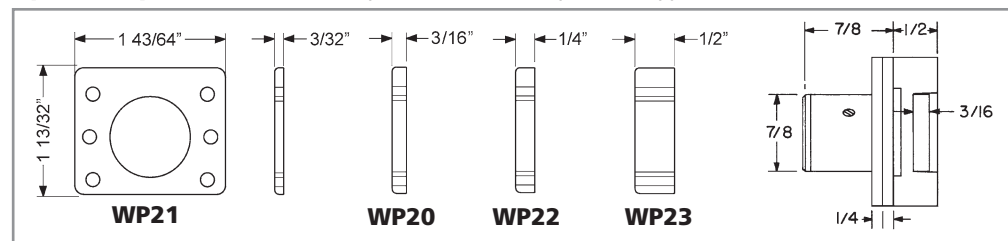

Typical Installation

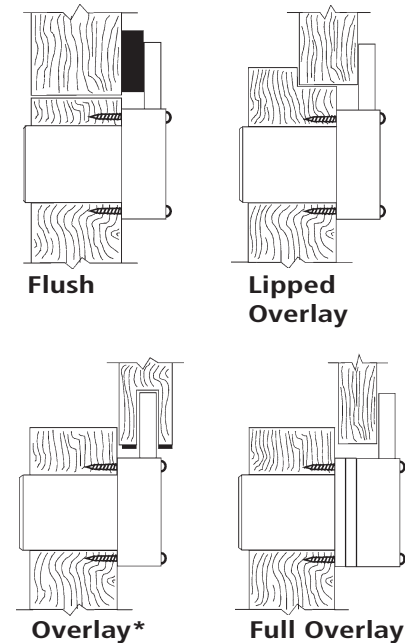

*Overlay installation is not recommended for particleboard.

Drill Guide Cut out this handy drill guide for easy installation.

