

600DW Deadbolt Drawer Lock




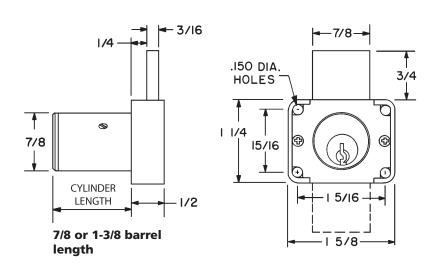

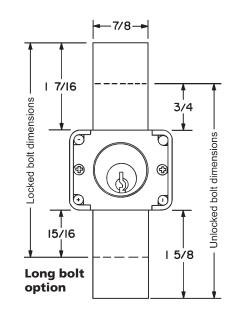

Included Accessories:


2 nickel plated keys 12-3 angle strike 4 lock mounting screws




12-3 angle strike

Typical Installation Flush Lipped Overlay Overlay* **Full Overlay** *Overlay installation is not recommended for particleboard.

Optional spacers Note: use of spacers and strikes depends on application and material thickness.

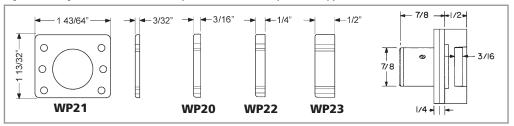





<u>Drill Guide</u> Cut out this handy drill guide for easy installation.

