

1-1/8 or 1-3/8

**Included Accessories (1-1/8 barrel length locks):**


- 2 10-350 plastic spacers
- 1 850-210 lip strike
- 4 lock mounting screws

**Included Accessories (1-3/8 barrel length locks):**


- 1 850-211 lip strike
- 4 lock mounting screws

**IMPORTANT NOTE FOR LOCK AND STRIKE INSTALLATION:**


Strike must be lined up so that dead lock portion of latch is depressed when drawer is closed. Line up center mark on latch with center mark on strike for correct strike placement.

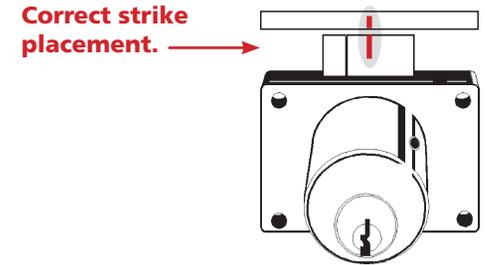

Correct strike placement.

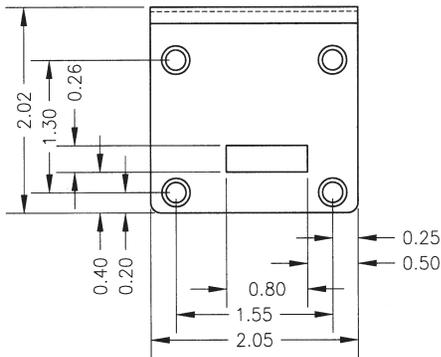


**850-210 lip strike**  
for use with 1-1/8" barrel length locks

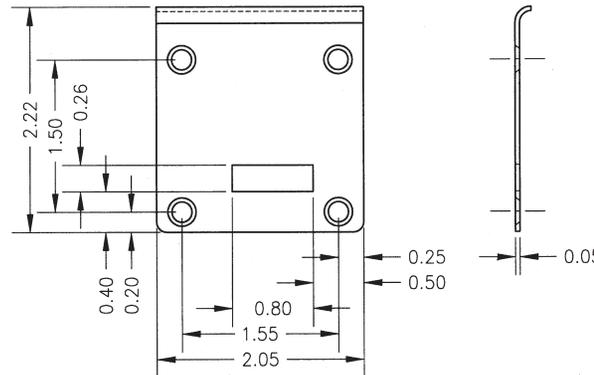


**850-211 lip strike**  
for use with 1-3/8" barrel length locks

**Spacer options** Note: use of spacers and strikes depends on application and material thickness.

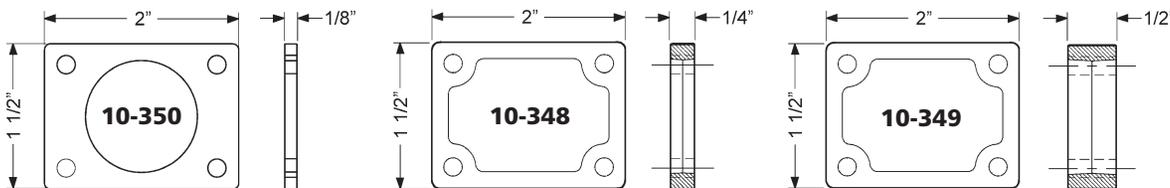

**Typical Installation**

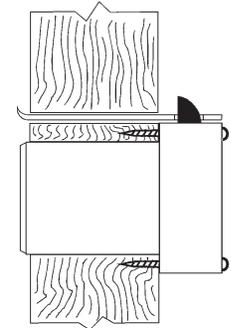

**Installation/handing**

