
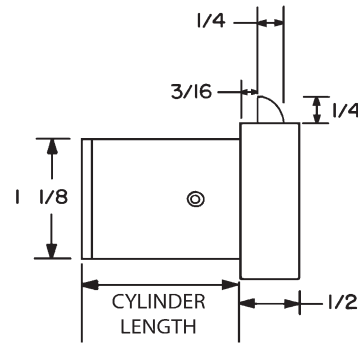


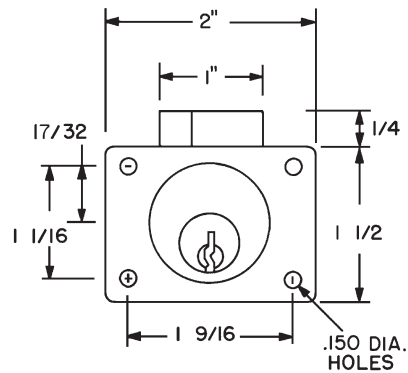

1-1/8 or 1-3/8

Included Accessories (1-1/8 barrel length locks):


- 2 nickel plated keys
- 2 10-350 plastic spacers
- 1 850-210 lip strike
- 4 lock mounting screws

Included Accessories (1-3/8 barrel length locks):


- 2 nickel plated keys
- 1 850-211 lip strike
- 4 lock mounting screws

IMPORTANT NOTE FOR LOCK AND STRIKE INSTALLATION:


Strike must be lined up so that dead lock portion of latch is depressed when drawer is closed. Line up center mark on latch with center mark on strike for correct strike placement.

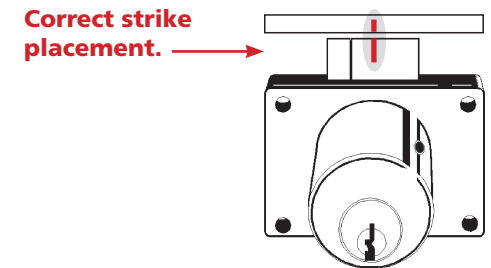

Correct strike placement.

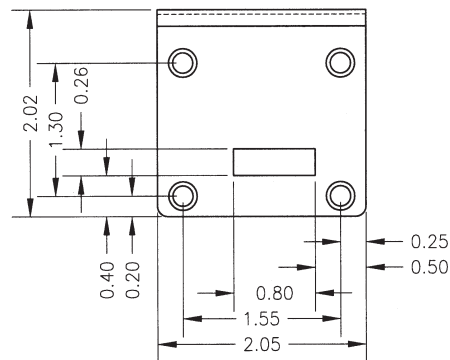


850-210 lip strike
for use with 1-1/8" barrel length locks

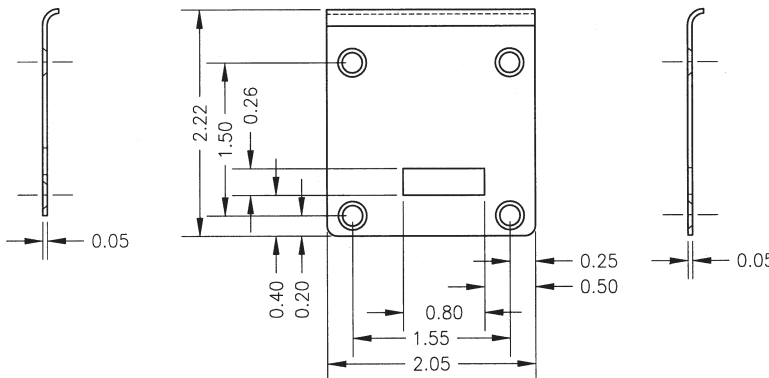


850-211 lip strike
for use with 1-3/8" barrel length locks

Spacer options Note: use of spacers and strikes depends on application and material thickness.

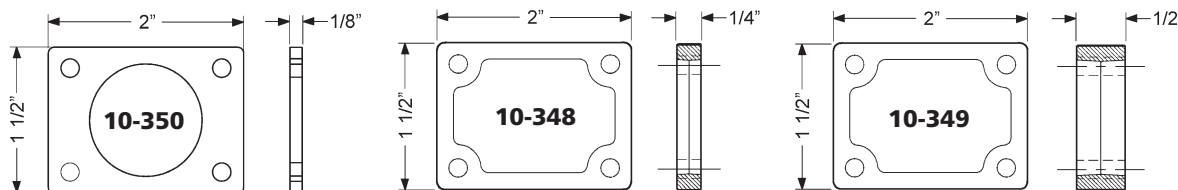

Typical Installation

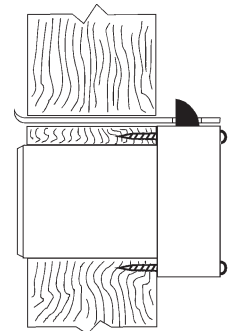

Installation/handing

