



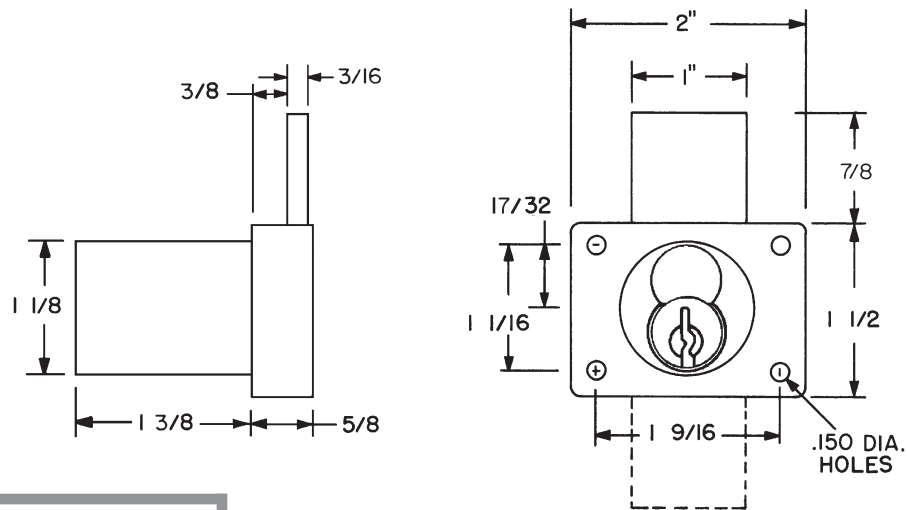


Included Accessories:

- 1 931-1 spacer for 6-pin Medeco cores
- 1 931-PA plastic thumbturn
- 3 10-350 plastic spacers
- 1 10-054 1/4" plastic bar strike
- 1 10-055 1/2" plastic bar strike
- 4 lock mounting screws

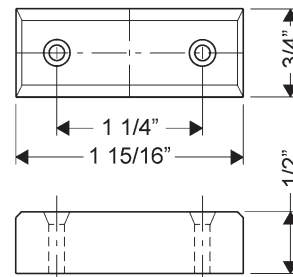


10-055 - 1/2" bar strike

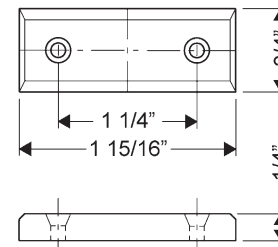


10-054 - 1/4" bar strike

Spacer options

Note: use of spacers and strikes depends on application and material thickness.

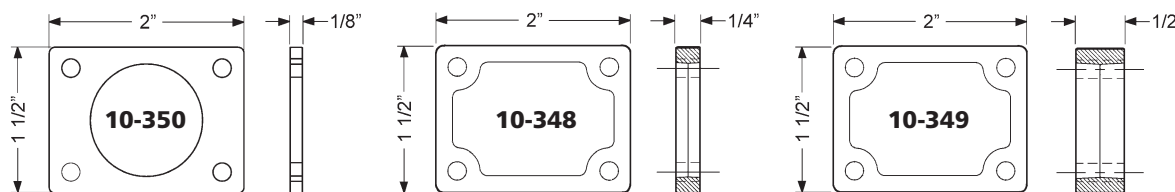

Typical Installation

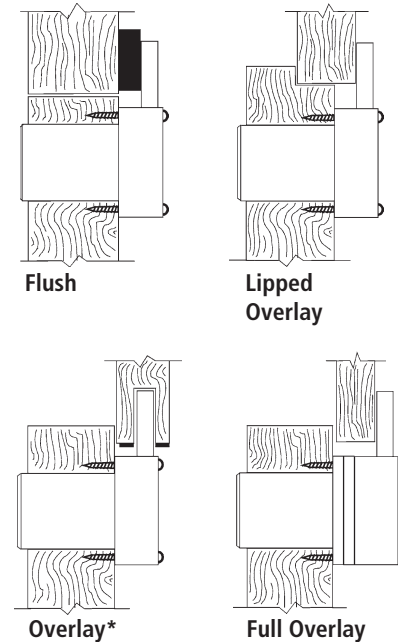

*Overlay installation is not recommended for particleboard.

Installation/handling for key-retaining option

