



## 996V — VERTICAL HAND (VH)

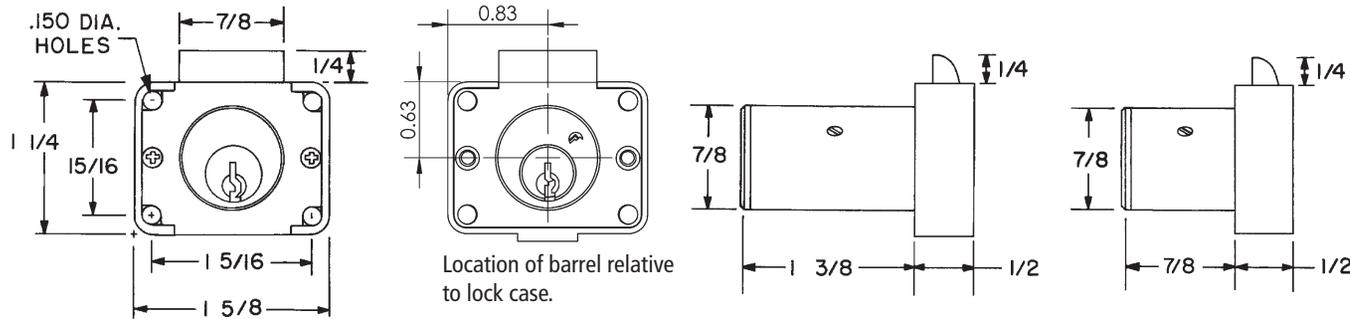


See box to right for correct strike placement. →

## 996I — INVERTED HAND (IH)

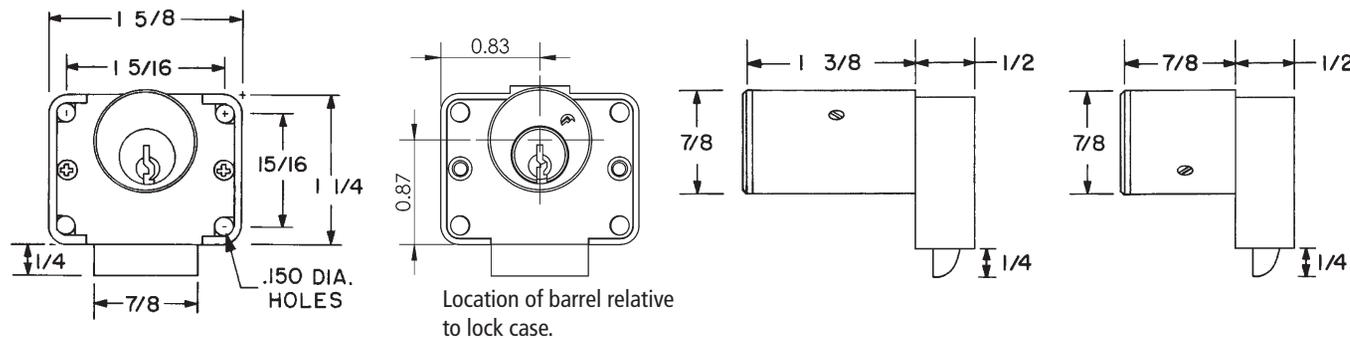


### IMPORTANT NOTE FOR LOCK AND STRIKE INSTALLATION:

Be sure and position barrel/cylinder and bolt for desired handing before drilling hole for lock. The position of the barrel/cylinder relative to the lock body is different for each of the four available handings. It is critical to configure the lock for the correct handing before starting installation.

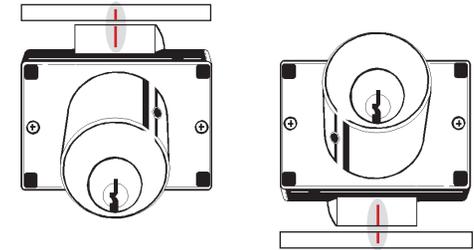

**STRIKE INSTALLATION:** Line up center mark on latch with center mark on strike for correct strike placement.


### Typical Installation

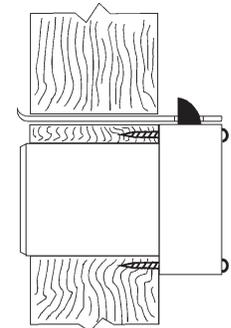



### Included Accessories:

- 2 nickel plated keys
- 999-STRIKE lipped strike
- 4 lock mounting screws

### Installation/handing

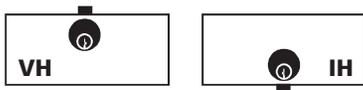

**Spacer options** Note: use of spacers and strikes depends on application and material thickness.

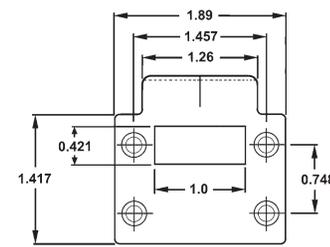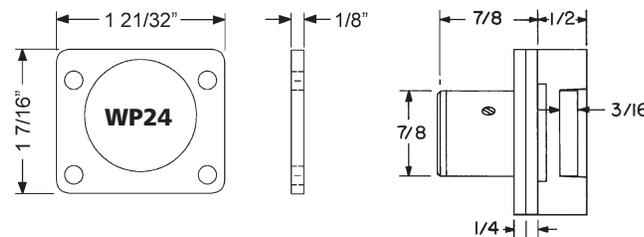

**999-STRIKE**  
lip strike (included)