



For door applications, place lock on side.

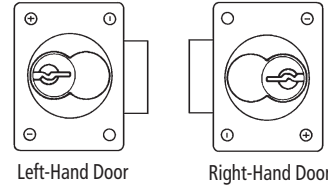


See box to right for correct strike placement.

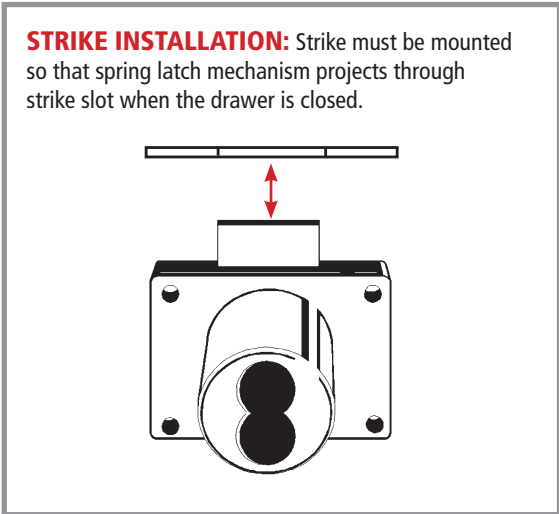

Included Accessories:

- 3 10-350 spacers
- 1 725-1 spacer for 6-pin cores
- 1 L78ST-1-SS lipped strike
- 1 725-PA plastic thumbturn
- 4 lock mounting screws

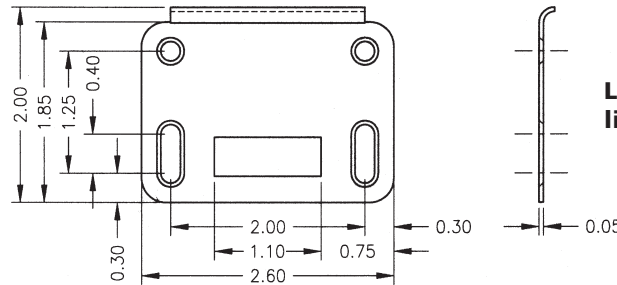

Spacer options Note: use of spacers and strikes depends on application and material thickness.

