



For door applications, place lock on side.

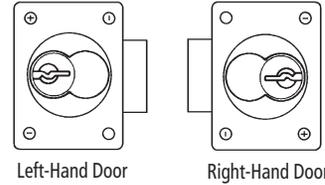


See box to right for correct strike placement.

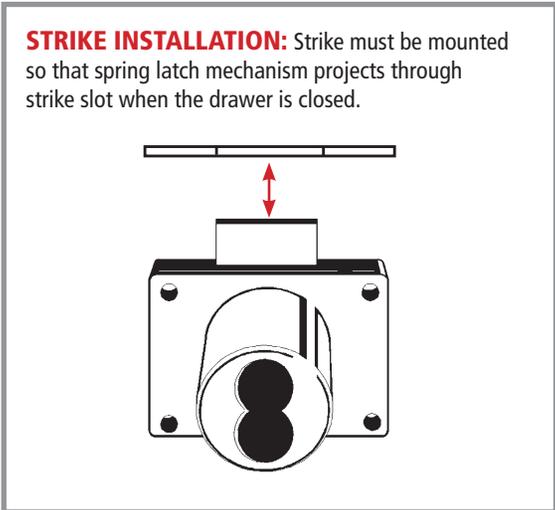

**Included Accessories:**

- 3 10-350 spacers
- 1 L78ST-1-SS lipped strike
- 1 7788-PA-D plastic thumbturn
- 4 lock mounting screws

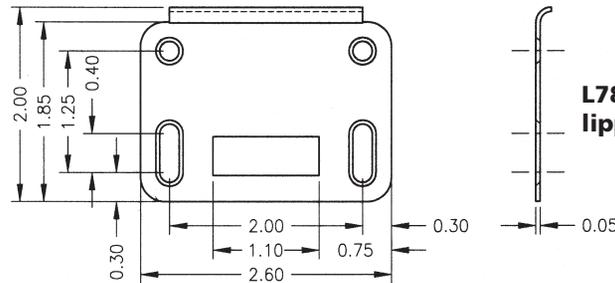

**L78ST-1-SS lipped strike**

**Spacer options** Note: use of spacers and strikes depends on application and material thickness.

