


# CONVERSION INSTRUCTIONS




# 100 / 500 / 200 / 600

## KEY-RETAINING / NON-KEY-RETAINING CONVERSION INSTRUCTIONS

1. Remove both screws from front of lock face
2. Lift off front of lock face
3. Remove key-retaining cam disk (or regular cam disk)
4. Replace with standard cam disk (or key-retaining cam disk)
5. Replace front of lock face
6. Secure with both screws

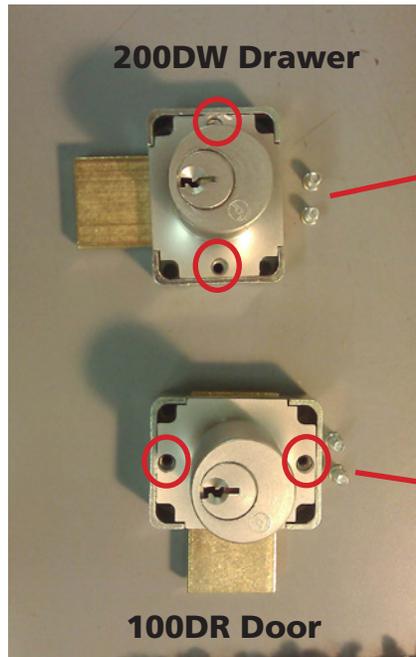

Remove key-retaining cam disks ← → Replace with standard cam disks

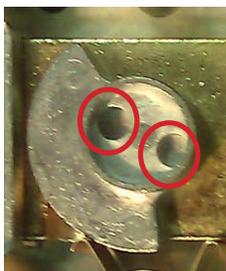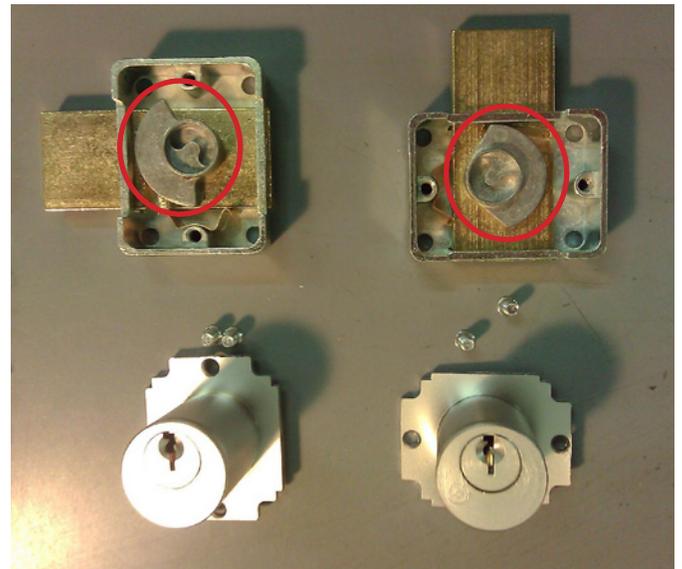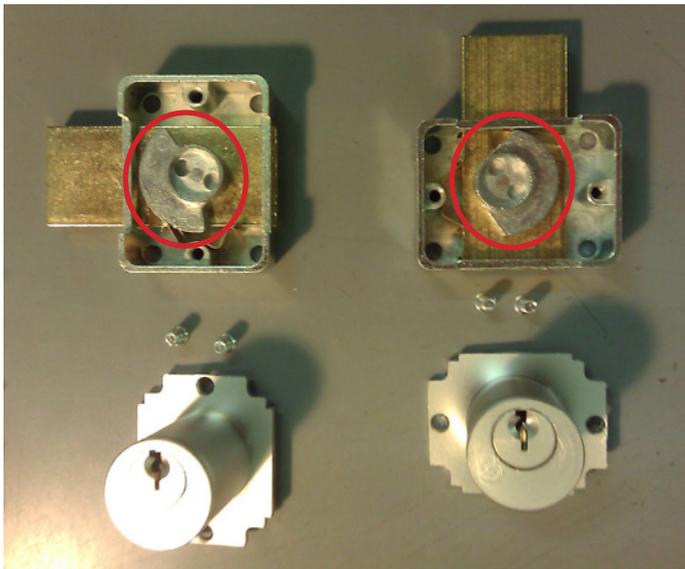

Key-retaining cam disks have two holes

Part-numbers:  
**15-2KR** for 100/500 locks  
**26-2KR** for 200/600 locks



Standard (non-key-retaining) cam disks have a curved slot

Part-numbers:  
**15-2** for 100/500 locks  
**26-2** for 200/600 locks